




MODEL: CLIPPER 2
5L, 7.5L, 10L & 15L

INSTALLATION, OPERATION AND SERVICING INSTRUCTIONS

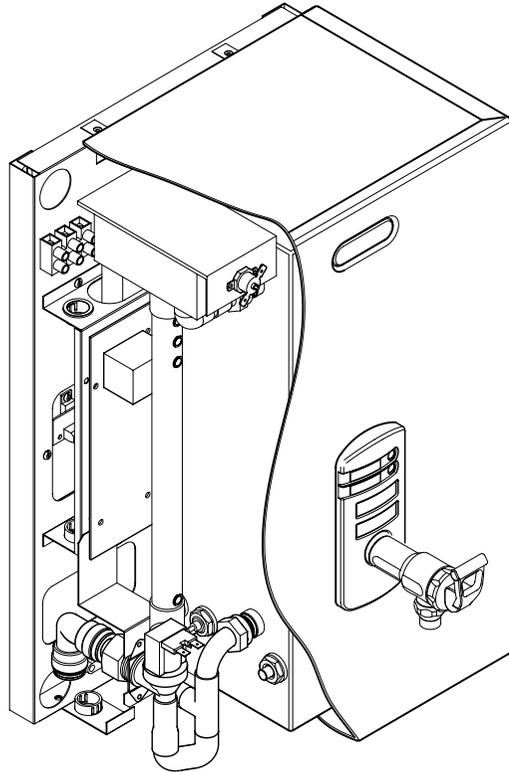

| | | |
|--------------------------------|---|--|
| Issue 21 21/12/07 DCR760 |  | Please read these instructions carefully before operating your boiler for the first time |
|--------------------------------|---|--|

Calomax Limited

Lupton Avenue, Leeds LS9 7DD

Tel. 0113 249 6681 Fax. 0113 235 0358

e-mail: service@calomax.co.uk

www.calomax.co.uk

| CONTENTS | page |
|-----------------------------|----------|
| INTRODUCTION | 3 |
| CHECK LIST | 3 |
| APPROVALS | 3 |
| CONSTRUCTION | 4 |
| INSTALLATION | 4 |
| LOCATION | 4 |
| COLD WATER INLET | 5 |
| DIMENSIONS AND WEIGHTS | 5 |
| VENT / OVERFLOW | 6 |
| ELECTRICAL CONNECTIONS | 6 |
| USER INSTRUCTIONS | 6 |
| SCALE | 7 |
| GENERAL OPERATION | 8 |
| GENERAL NOTES | 8 |
| CLEANING | 8 |
| SERVICE INSTRUCTIONS | 9 |
| GENERAL FUNCTIONS | 11 |
| EXPLODED DIAGRAM | 12/13 |
| ACCESSORIES | 14/15 |
| SPARE PARTS | 16/17/18 |
| WIRING DIAGRAM | 19 |
| TROUBLE SHOOTING | 20 |
| SERVICE HISTORY NOTES | 21/22 |
| WARRANTY | 23 |
| PRODUCT SPECIFICATION | 24 |

INTRODUCTION

Thank you for purchasing a Calomax Clipper 2 range boiler. All our products are designed to give years of simple, reliable operation. To ensure this, it is important that the installation and subsequent servicing is carried out by a suitably qualified engineer in accordance with these instructions.

For assistance in finding a suitable engineer in your area, visit our website www.calomax.co.uk, contact our service department on 0113 249 6681 or e-mail: service@calomax.co.uk

CHECK LIST

Before commencing installation, check that the following parts have been supplied with the boiler:

1. 4 off wall fixing screws and plugs.
2. 1 off solenoid adapter.
3. 1 off 15mm pipe elbow.
4. 1 off 15mm straight pipe fitting.
5. 1 off status label

APPROVALS



This product conforms to the CE marking directive 93/68/EEC through compliance with the following standards:



Electromagnetic Compatibility Directive
Low Voltage Directive 73/23/EEC in accordance with:

BS EN 60335-2-63:1993

Compliance with these standards has been confirmed through testing by an independent NAMAS approved body

Calomax products have been tested and found to comply with the requirements of the Water Supply (Water Fittings) Regulations 1999 for England and Wales Water Bylaws 2000, Scotland and the Water Regulations Ireland.

CONSTRUCTION


All metallic components of the machine, in direct contact with drinking water are manufactured from high quality 304 grade stainless steel, or non ferrous materials, providing maximum resistance to corrosion.

INSTALLATION

LOCATION

A suitably qualified engineer must install this unit. Plumbing and electrical installation work is involved.

The boiler must be installed in a location where access is restricted to operators that are suitably trained, or where

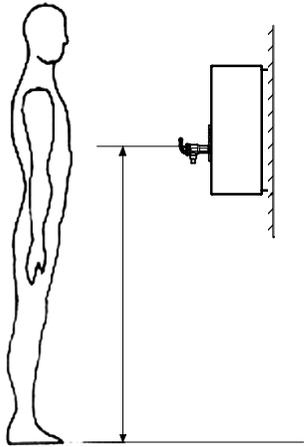

To comply with recommendations from the health and safety executive it is important that due consideration be given to safe operation of the controls of the boiler. The boiler should therefore be mounted in such a manner that the operator can stand directly facing the machine with the controls at a recommended height from the floor to the draw-off tap handle of 1200mm +/- 100mm. Consideration should also be given


to the servicing requirements of the machine. The maximum and minimum ambient operating conditions must be between 5 °C and 35 °C. The appliance is not suitable for installation where a water jet could be used. Install the boiler in a position having adequate ventilation, on a wall capable of carrying the working weight of the boiler.

COLD WATER INLET

To comply with the U.K. Water Supply Regulation a single check-valve must be fitted to the supply. BEFORE CONNECTING, THE SUPPLY PIPE MUST BE THOROUGHLY FLUSHED OUT TO ENSURE THAT FOREIGN MATTER DOES NOT BLOCK OR ENTER THE SOLENOID VALVE

The boiler must be connected to a potable water supply, in a manner which complies with UK water regulations. The boiler should be connected to a ½" (15mm) drinking water supply via an appropriate isolating valve. The supply must provide a constant pressure of between 20 KPa and 1000 KPa (0.2 to 10 Bar). If the water supply contains excessive solids in suspension it is recommended that a fine mesh "in line" water filter is fitted in the pipe work. Failures due to scale and sediment are not covered by the warranty.

DIMENSIONS AND WEIGHTS

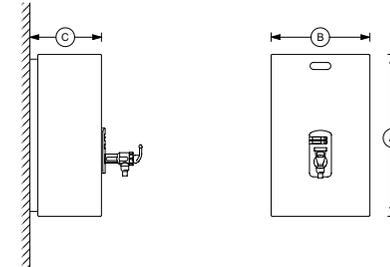

| MODEL | | A | B | C | DRY WEIGHT | WORKING WEIGHT |
|-------|----|-----|-----|-----|------------|----------------|
| 5L | mm | 510 | 313 | 226 | 10Kg | 17Kg |
| 7.5L | mm | 582 | 368 | 251 | 13Kg | 24.5Kg |
| 10L | mm | 582 | 368 | 251 | 13Kg | 27Kg |
| 15L | mm | 623 | 401 | 274 | 15Kg | 35Kg |

VENT & OVERFLOW

The vent / overflow pipe must be extended and laid with a **continuous fall**, discharging to a safe and visible point. The pipe should not be directly connected to a closed waste, as taste problems may occur and should never be allowed to become blocked or restricted. One way this could be connected is via a tundish arrangement. 15mm copper or 'Speedfit' pipe should be used. If the machine is operated without the overflow pipe being extended as advised, any subsequent damage incurred will be the responsibility of the installer.

ELECTRICAL CONNECTIONS

The installation must comply with the current I.E.E. Wiring regulations. If in doubt consult a qualified electrician.

This appliance must be earthed. The machine operates a nominal 3kW element at 240v 50 Hz supply

The installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable.

USER INSTRUCTIONS



During normal operation some external parts will become very hot, particularly the tap body. Care must be taken to avoid injury, a burn or scald.

Commissioning

Turn on the water supply and then switch on the electrical supply.

The Wait/Ready light will flash yellow (indicating below temperature) and the unit will slowly fill with water (0.5 L/Min). When water passes the low level sensor (just below tap level) the element will also be energised. When the normal operating water level is reached the solenoid will be disabled and the element will continue to heat the boiler until full operating temperature has been reached. At this point the Wait/Ready light will show solid orange indicating that the boiler is full and up to temperature.

Subsequent Use

After the boiler has finished the commissioning cycle, and water is drawn from the tap, water will be replaced in short cycles (Small amount of water and then heat). The solenoid and element will never be on at the same time unless the boiler is switched off and on again (Re-setting commission mode). In normal use the boiler will always be at operating temperature indicated by the Wait/Ready light showing a solid (not flashing) colour. When the boiler is full and ready the light will be orange and when the boiler is only part full and ready the light will be yellow.

Note:

When the green service indicator light on the front of the boiler is showing solid colour, the machine has been starved of water for in excess of 20 minutes and the solenoid valve has been disabled to prevent damage to the solenoid coil through overheat. To re-energise the solenoid, the unit must be disconnected from the electrical supply and then switched back on, after first reinstating the water supply.

SCALE

The production of scale is a natural phenomenon and commonly occurs in hot water systems. The nature of the scale produced and its rate of formation varies widely throughout the country.

To ensure continuous, reliable operation, the boiler should be regularly de-scaled by a suitably qualified engineer. Suitable chemical de-scalants must only be used if the manufacturers recommendations are strictly adhered to. This is to prevent health and safety issues, taste problems and potential damage to the appliance. Misuse of such chemicals is not covered by the product warranty.

The Clipper boiler benefits from an integral scale inhibitor, **this is not** a scale eliminator and its effects will differ according to the water quality in your area. To ensure trouble free operation, periodically check for scale inside the boiling chamber. The production of scale is a natural phenomenon and some de-scaling may be required within the first 12 months. This is not covered under the products warranty as it is not a fault.

GENERAL OPERATION

- Hold a cup below the tap or place large vessels on the drip tray. Care must be taken to avoid injury through splashing or over-filling.
- To begin filling, pull the handle forward or push it backward – hot water begins to flow. If the tap is opened fully it can be locked open (for filling large vessels) in this state the boiler must never be left unattended.
- To stop filling, release the handle so it returns to the closed position. NEVER PASS YOUR HAND BENEATH THE NOZZLE.

GENERAL NOTES

- Please retain these instructions for future reference
- Ensure that a suitable drip tray is positioned below the tap nozzle. This will help keep the surrounding work surfaces and floor free from drips or splashes. Various options are available and are outlined on the Accessories page of this booklet.
- All de-scaling and servicing must be performed by a suitably qualified engineer.

CLEANING



Avoid using any abrasive materials. Wiping the outer casing with a damp cloth should be sufficient. Some stainless steel cleaning products may not be suitable for plastic and must not come in contact with the plastic fascia. Always disconnect the electrical supply before cleaning.

NEVER USE A SPRAY JET OR ANY OTHER METHOD WHICH COULD CAUSE WATER TO ENTER THE ELECTRICAL CHAMBER.

SERVICE INSTRUCTIONS

When the green service indicator light on the front of the boiler is showing solid colour, the machine has been starved of water for in excess of 20 minutes and the solenoid valve has been disabled to prevent damage to the solenoid coil through overheat. To re-energise the solenoid, the unit must be disconnected from the electrical supply and then switched back on, after first reinstating the water supply.

If the unit requires servicing the service indicator will flash a sequence of light pulses. A 2x or 3x-light pulse generally indicates that the low or normal level probes require de-scaling.

A 4x-light pulse means the water level has reached the high level sensor and the likelihood is that the machine has over-filled due to debris trapped in the solenoid valve. The debris can be removed by drawing plenty of water from the dispense tap, causing the solenoid valve to operate and flush out the obstruction. The machine will reset itself once the problem has cleared. If this does not rectify the problem, turn off the water supply and check for debris in the valve's filter. The unit can be used normally while the service indicator is flashing a 4x pulse. For further assistance, contact our service department on 0113 249 6681
e-mail service@calomax.co.uk. or find a local service engineer at www.calomax.co.uk

Once the outer casing is removed, access to the Service Area has been gained. This access must be restricted to persons having knowledge and practical experience of the appliance, in particular as far as safety and hygiene are concerned.

De-scale

To gain access to internal components, the body lid must be removed. To remove the lid, break the lid gasket seal and lift it clear of the body.

Note: Whenever the body lid has been removed from the boiler a new lid gasket may be required to ensure a steam-tight joint. Damage to the unit caused by a poor lid seal is not covered by warranty.

Scale deposits should be removed from all internal surfaces, particularly the heating element and thermistor. If the deposits are soft, use a nylon pad and flush out. Abrasive cleaning materials containing scouring powders and detergents must not be used, such materials can cause taste problems. Suitable chemical de-scalants must only be used in accordance with the manufacturers recommendations. This will prevent health and safety issues, taste problems and potential damage to the appliance. All trace of these chemicals must be removed from the appliance before re-commissioning the unit . Misuse of such chemicals is not covered by the product warranty.

IMPORTANT Before re-commissioning the boiler it is important that all scale and moisture is removed from the level sensors, to avoid a false signal being transmitted through the scale to the boiler body. Failure to remove this scale and/or moisture could cause the sensor to indicate to the PCB that water is covering the element, whether or not water is present. In this situation the PCB could energise the element causing failure. If in doubt, protect the element by hand filling with water to the level of the draw-off tap before switching on the electrical supply to the boiler.

GENERAL FUNCTIONS

The printed circuit board (PCB) controls the heating and filling functions of the boiler by monitoring the thermistor and level sensors. The PCB also controls the external light unit to indicate the current state of the boiler. Red and yellow LED'S on the circuit board indicate whether the PCB has energised the element or solenoid respectively.

Should an element fail and need to be replaced, it may be necessary to replace the lid gasket to ensure a reliable steam-seal. **Note: the element has a permanent 'Live' feed, and the 'Neutral' is switched.**

Printed Circuit Board replacement (PCB)

In the event of a PCB failing and a replacement being required, full instructions will be supplied. It is important to note however, that the Triac PCB must be securely mounted against the copper heat-sink to ensure reliable heat dissipation. Heat transfer compound is also supplied with all replacement circuit boards.

Adjusting the Water Temperature Set Point


The temperature potentiometer (Pot) is pre-set at Calomax and will only require adjustment in exceptional circumstances. Contact Calomax for advice.

Water boils at different temperatures depending on barometric pressure. The temperature should not be tuned higher than 98°C, or over boiling may occur during low barometric pressure conditions, causing the unit to trip the overheat cut-out device.

If parts required are not identified, please contact Calomax Limited

Exploded parts view for Clipper Range boilers


(To be read in conjunction with the spare parts list)

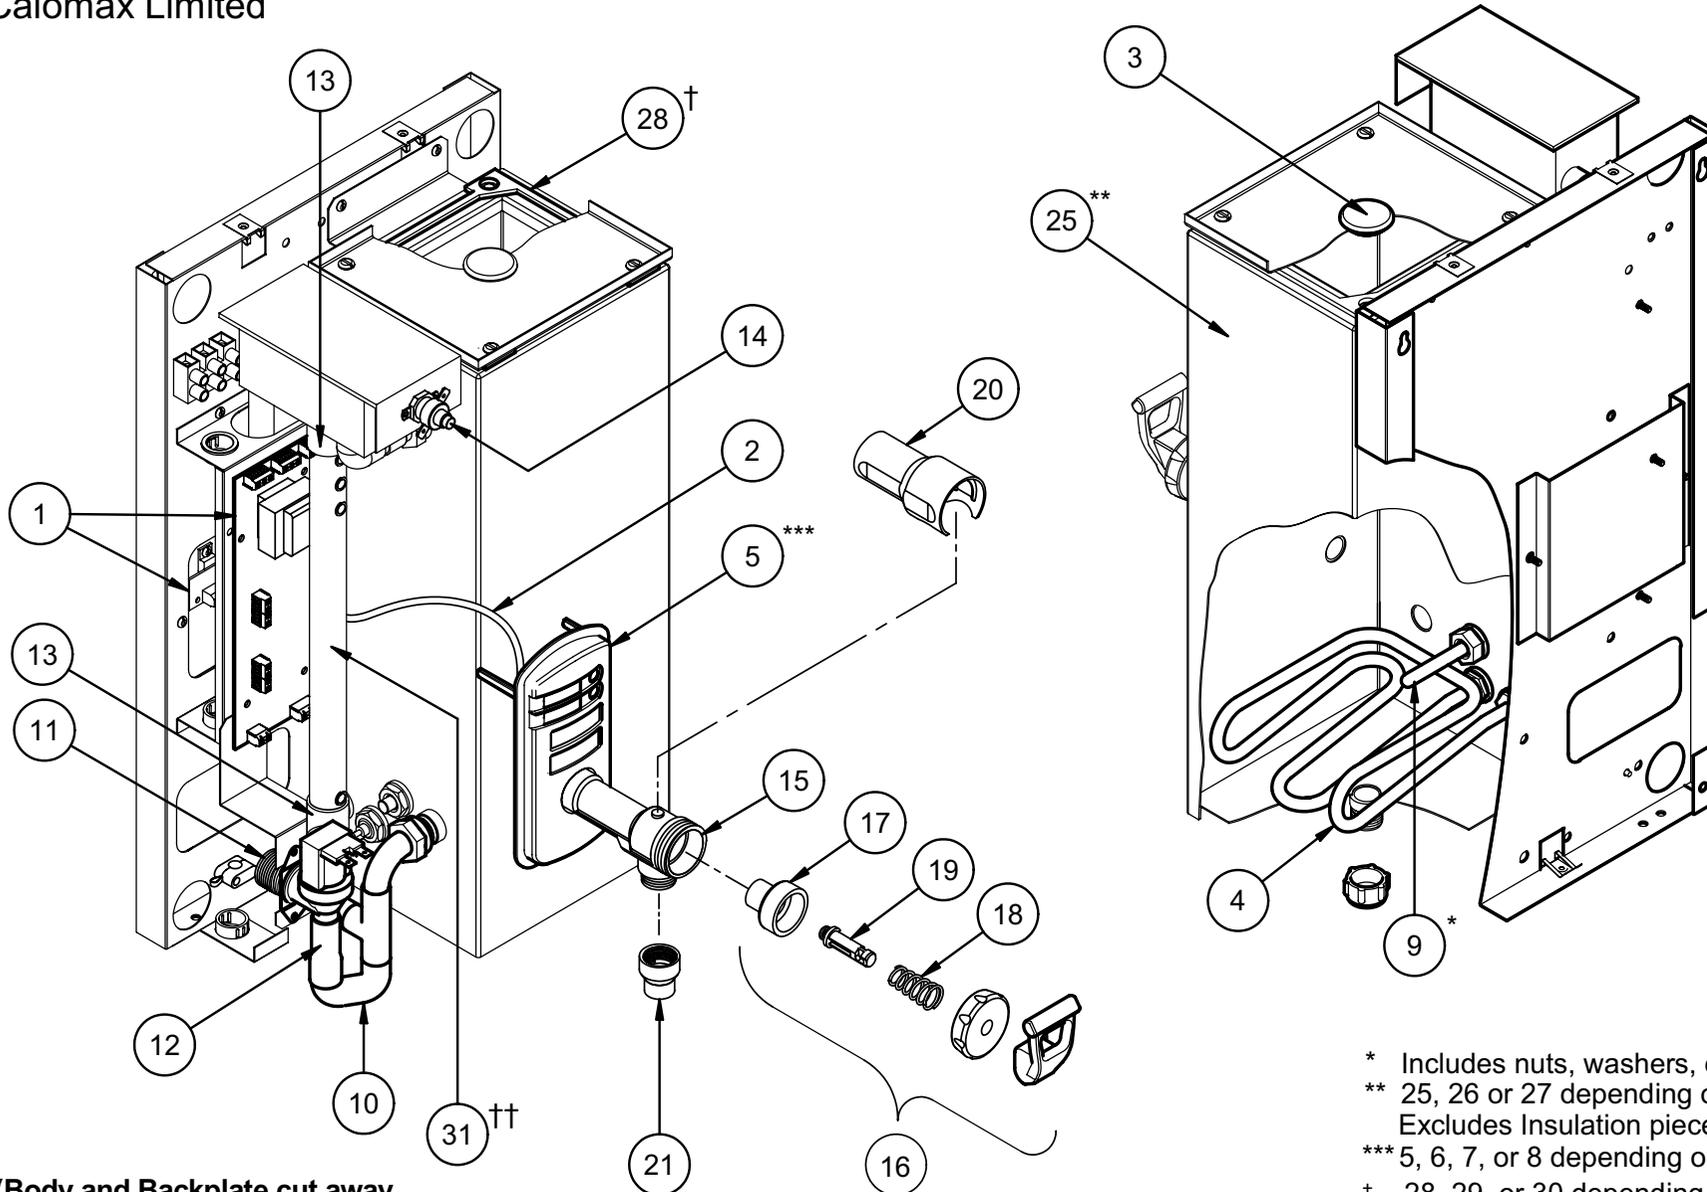

(Body and Backplate cut away to show internal components)


- * Includes nuts, washers, etc.
- ** 25, 26 or 27 depending on model.
Excludes Insulation pieces, element, etc.
- *** 5, 6, 7, or 8 depending on model
- † 28, 29, or 30 depending on model
- ‡ 31, 32, 33 or 34 depending on model

Accessories

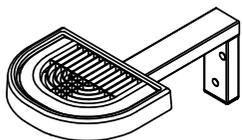


Wall-mounting drip tray (no drain)

Ref. WMPDTK1 (to suit 5L)
WMPDTK2 (to suit 7.5L & 10L)
WMPDTK3 (to suit 15L)

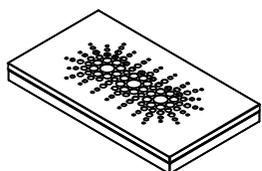


Worktop-mounting Stainless Steel drip tray

Ref. SSDTK (freestanding)
SSDTWDK (with drain outlet)

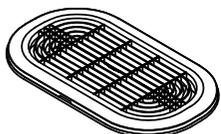

Counter-insertion plastic moulded drip tray


Ref. PDTWDK (with drain outlet)

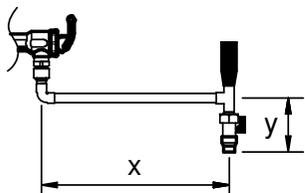


Swivel Nozzle attachment

(Non-swivel nozzles also available - please
contact Calomax for further information)


Ref. SN (made to customer's dimensions)

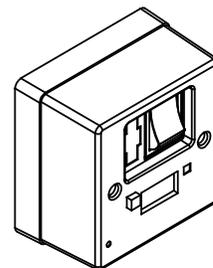

Fused spur time switch Ref. 7DFST Max 3kW

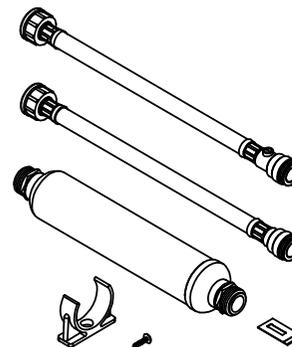


Water filter kit (To reduce taste & odour problems) Ref. 10TOSCK

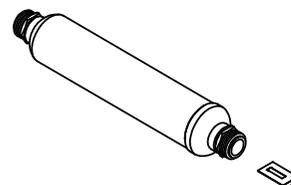

Ref. 10TOSC (Filter & timestrip replacement for kit shown above)


SPARE PARTS

(Refer to centre pages for location).

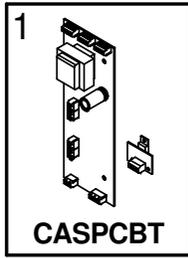


CASPCBT

PRINTED CIRCUIT BOARD Inc. TRIAC

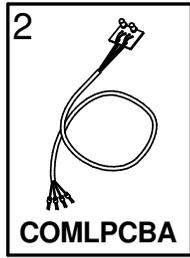


COMLPCBA

LIGHT PCB

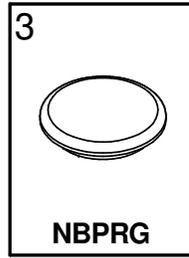


NBPRG

BODY LID GROMMET

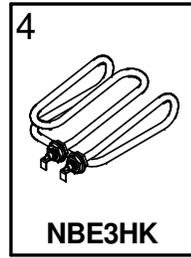

NBE3HK

3kW ELEMENT

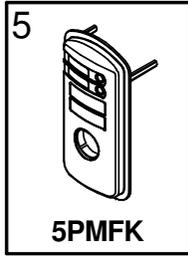

5PMFK

PLASTIC MOULDED FASCIA KIT FOR 5L




7.5PMFK

PLASTIC MOULDED FASCIA KIT FOR 7.5L




10PMFK

PLASTIC MOULDED FASCIA KIT FOR 10L

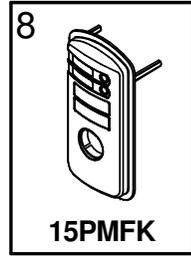

15PMFK

PLASTIC MOULDED FASCIA KIT FOR 15L

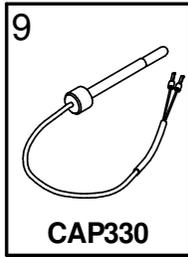


CAP330

THERMISTOR ASSEMBLY KIT




NBWPT

WATER PIPE

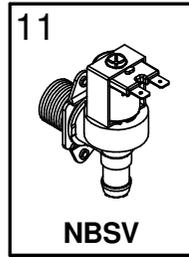


NBSV

SOLENOID VALVE

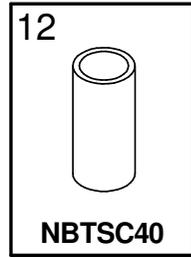


NBTSC40

Ø15mm SILICONE TUBE CUT 40mm

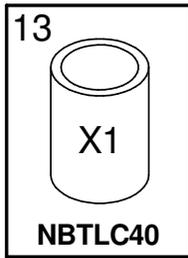


NBTL40

Ø20mm SILICONE TUBE CUT 40mm

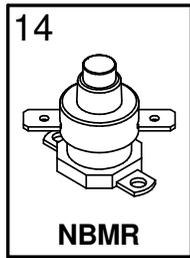


NBMR

MANUAL RESET THERMAL CUTOUT

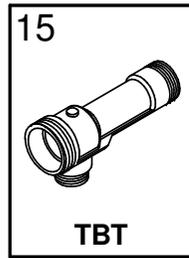

TBT

DRAW OFF TAP BODY

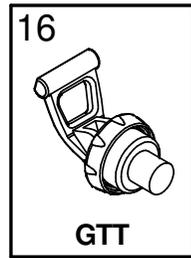

GTT

TAP TOP ASSEMBLY


SPARE PARTS

(Refer to centre pages for location).




CBTCW

TAP CUP WASHER

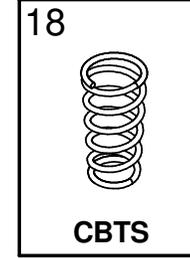


CBTS

TAP SPRING

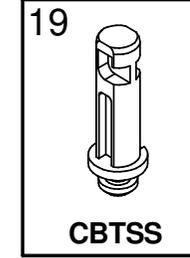


CBTSS

TAP SLOTTED STEM

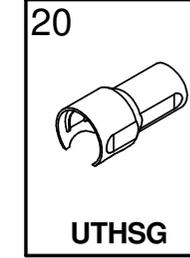

UTHSG


GREY TAP BODY HEAT SHIELD

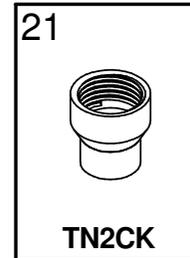

TN2CK

TN2CK


SLOW FILL NOZZLE

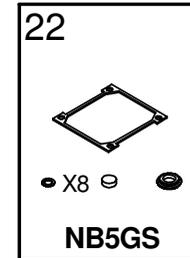

NB5GS

NB5GS


GASKET SET FOR MODEL 5L

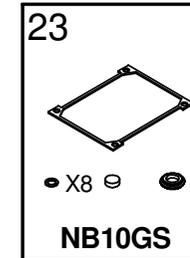

NB10GS

NB10GS


GASKET SET FOR MODELS 7.5L & 10L

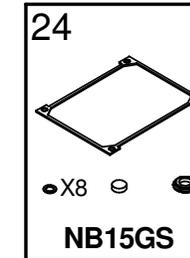

NB15GS

NB15GS


GASKET SET FOR MODEL 15L

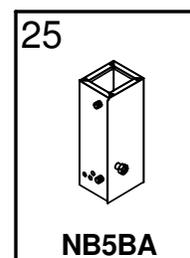

NB5BA

NB5BA


BODY FOR MODEL 5L

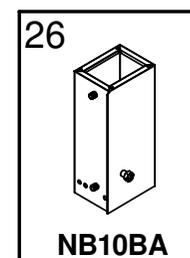

NB10BA

NB10BA


BODY FOR MODELS 7.5L & 10L

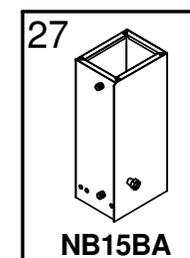

NB15BA

NB15BA


BODY FOR MODEL 15L

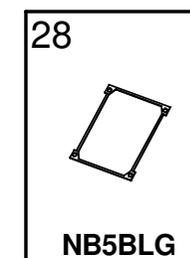

NB5BLG

NB5BLG


BODY LID GASKET FOR MODEL 5L

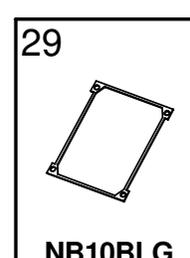

NB10BLG

NB10BLG


BODY LID GASKET FOR MODELS 7.5L & 10L

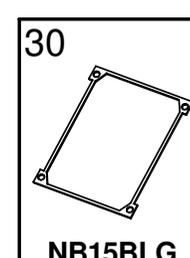

NB15BLG

NB15BLG


BODY LID GASKET FOR MODEL 15L

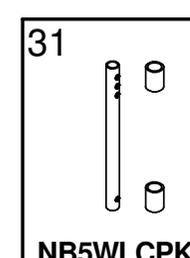

NB5WLCPK

NB5WLCPK

WATER LEVEL CONTROL PIPE FOR 5L

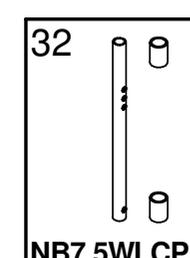


NB7.5WLCPK

NB7.5WLCPK


WATER LEVEL CONTROL PIPE FOR 7.5L

Wiring Schematic for Calomax Clipper Water Boilers

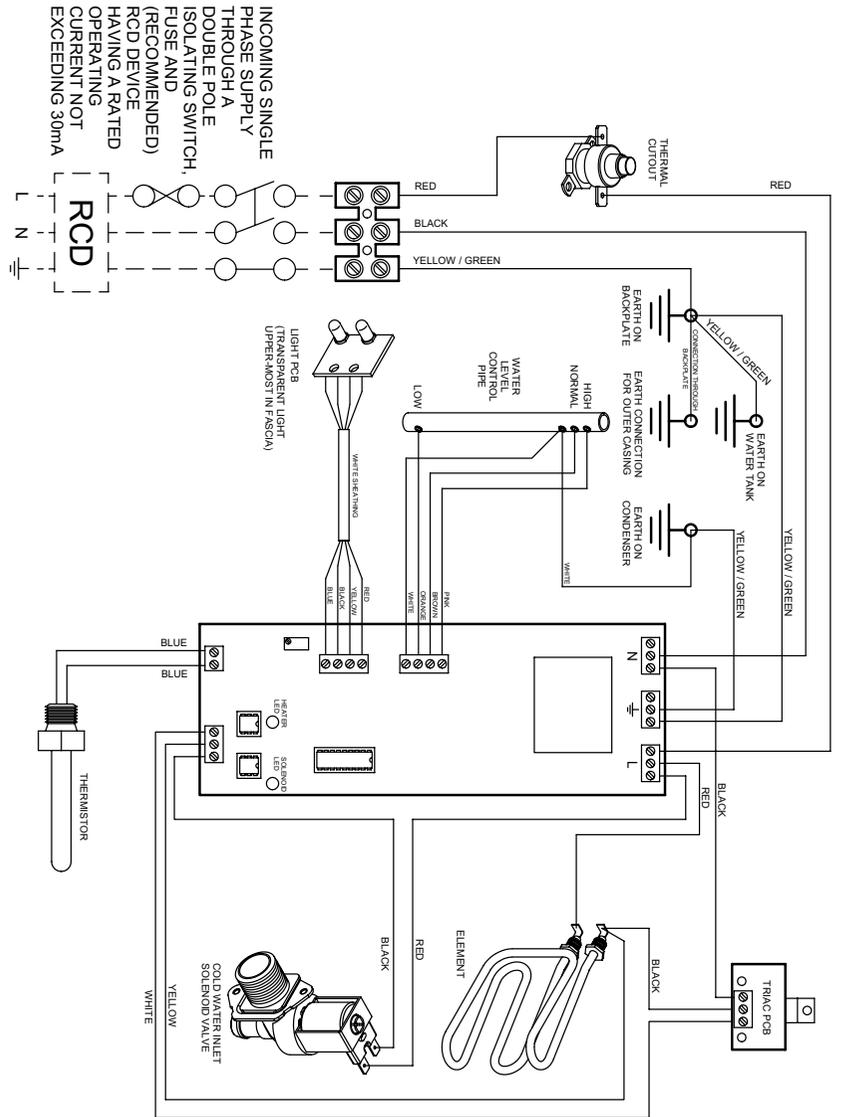

NB: Not to scale.

Spare parts are usually available ex-stock.
Please quote Model & Serial Number.

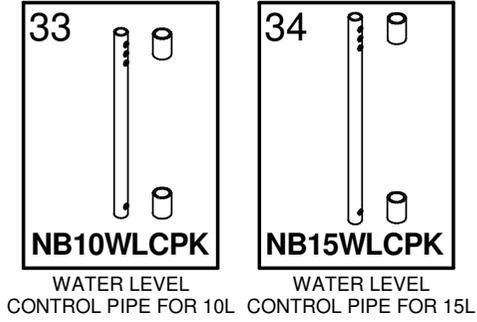

BASIC TROUBLE SHOOTING

| Symptoms | Possible Cause | Remedy |
|---------------------------------|--|---|
| No boiling water available | Broken tap top | Replace tap top (or component) |
| | Normal level sensor holding signal | De-scale |
| | Thermal cut-out tripped (no light) | Reset and check for faults |
| | Element failed | Replace element |
| Thermal cut-out trips regularly | Excessive internal scale. (See 'De-Scale' page 12) | De-scale the boiler (Particularly thermistor) |
| | Faulty wiring to thermistors / faulty thermistors | Repair / replace as required |
| | Temperature controller needs adjusting | Lower operating temperature |
| | Element failed to earth | Replace element |
| | Defective Printed Circuit Board | Replace Circuit Board |
| Overflows | Dirt in solenoid valve. | Clean solenoid filter / or replace solenoid, "work the boiler" -see Service Instructions (page 12). |
| | Level sensors require de-scaling or replacing | De-scale / replace sensors |
| | Printed circuit board faulty | Replace P.C.B |

SERVICE HISTORY AND NOTES

SERVICE HISTORY AND NOTES

WARRANTY GUARANTEE (UK Mainland customers only)

Calomax have manufactured water boilers in the UK for over 50 years. We are proud of our products and the back-up service we provide

Properly maintained and serviced, a Calomax boiler should last many years and we have no hesitation in providing a full 12 months (mainland U.K.) parts and labour warranty for all models. Please complete and return the enclosed product registration form as soon as possible to activate this, **or register online at www.calomax.co.uk** .

In addition, the Clipper, Kudos and Quantum models carry an additional 12 month back to base warranty.

Some factors are beyond our control and would invalidate the warranty offered. These include:

- Incorrect installation
- High / Low water pressure
- Incorrect voltage supply
- Accidental damage
- Limescale build-up

The last item can be a particular problem for water dispensing equipment in hard-water areas. All hot water equipment should be serviced and de-scaled by approved organisations on a regular basis to avoid a damaging build-up of limescale.

Although our boilers incorporate scale-inhibitor technology, we recommend that a taste, odour and scale filter should be fitted where appropriate.

Please visit our website www.calomax.co.uk for details of our Service Partner Network and the range of filters and accessories available

PLEASE ENTER MODEL AND SERIAL NUMBER FOR
FUTURE REFERENCE

| | | |
|---|--------------------------|--|
| Model | | |
| Serial Number | | |
| Draw off Capacity | 5L 7.5L 10L 15L | 5 Litres 7.5 Litres 10 Litres 15 Litres |
| Heat-up Time (Full capacity - first switch on) | 5L 7.5L 10L 15L | 20 Minutes 30 Minutes 40 Minutes 60 Minutes |
| Average Flow rate from tap (Standard nozzle) | | 2.5 Litres / Minute |
| Voltage | | 220 - 240 V ac 50-60 Hz |
| Power rating | | 3kW (MAX) |

Note: All measurements are approximate.

PLEASE CONTACT OUR SERVICE DEPARTMENT FOR ASSISTANCE

Calomax Limited, Lupton Avenue, Leeds LS9 7DD
Tel: 0113 249 6681
Fax: 0113 235 0358
e-mail: service@calomax.co.uk