




MODEL: CASCADE

INSTALLATION, OPERATION AND SERVICING INSTRUCTIONS

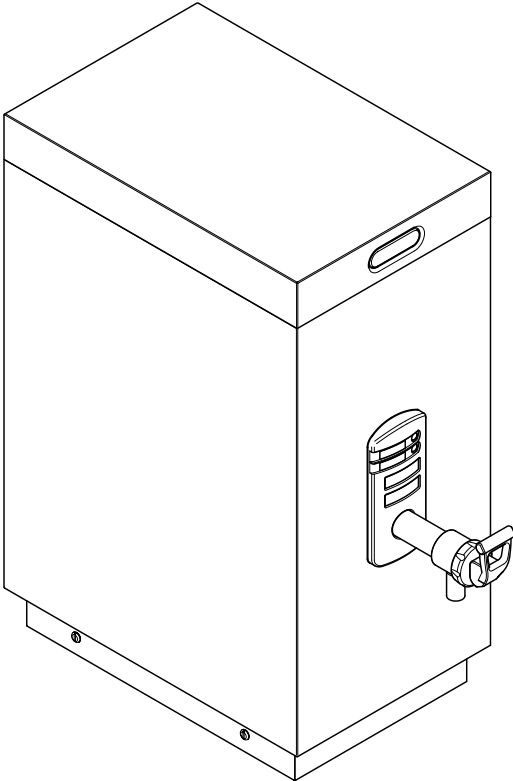

| | | |
|---------------------------------|--|--|
| Issue 12 21/12/07 DCR 760 | A black warning triangle with a white exclamation mark inside. | Please read these instructions carefully before operating your boiler for the first time |
|---------------------------------|--|--|

Calomax Limited
Lupton Avenue, Leeds LS9 7DD
Tel. 0113 249 6681 Fax. 0113 235 0358
e-mail: service@calomax.co.uk www.calomax.co.uk

CONTENTS

| | |
|-----------------------------|--------|
| INTRODUCTION | PAGE 3 |
| CHECK LIST | 3 |
| APPROVALS | 3 |
| CONSTRUCTION | 4 |
| INSTALLATION | 4 |
| LOCATION | 4 |
| COLD WATER INLET | 5 |
| DIMENSIONS AND WEIGHTS | 5 |
| VENT / OVERFLOW | 6 |
| ELECTRICAL CONNECTIONS | 6 |
| USER INSTRUCTIONS | 6 |
| SCALE | 7 |
| GENERAL OPERATION | 8 |
| GENERAL NOTES | 8 |
| CLEANING | 8 |
| SPARE PARTS | 9 |
| EXPLODED DIAGRAM | 10/11 |
| SERVICE INSTRUCTIONS | 12 |
| ACCESSORIES | 15/16 |
| WIRING DIAGRAM | 17 |
| TROUBLE SHOOTING | 18 |
| WARRANTY | 19 |
| PRODUCT SPECIFICATION | 20 |

INTRODUCTION

Thank you for purchasing a Calomax Cascade boiler. All our products are designed to give years of simple, reliable operation. To ensure this, it is important that the installation and subsequent servicing is carried out by a suitably qualified engineer in accordance with these instructions.

For assistance in finding a suitable engineer in your area, visit our web site www.calomax.co.uk or contact our service department on 0113 249 6681 or e-mail: service@calomax.co.uk

CHECK LIST

Before commencing installation, check that the following parts have been supplied with the boiler:

1. WRAS approved flexible water inlet hose suitable for potable water.
2. Status label

APPROVALS



This product conforms to the CE marking directive 93/68/EEC through compliance with the following standards:



Electromagnetic Compatibility Directive
Low Voltage Directive 73/23/EEC in accordance with:

BS EN 60335-2-63:1993

Compliance with these standards has been confirmed through testing by an independent NAMAS approved body



Calomax products have been tested and found to comply with the requirements of the Water Supply (Water Fittings) Regulations 1999 for England and Wales Water Bylaws 2000, Scotland and the Water Regulations Ireland.


CONSTRUCTION

All metallic components of the machine, in direct contact with drinking water are manufactured from high quality 304 grade stainless steel, or non ferrous materials, providing maximum resistance to corrosion.

INSTALLATION

LOCATION

The boiler must be installed in a location where access is restricted to operators that are suitably trained, or where untrained operators of the machine can be supervised by trained personnel.

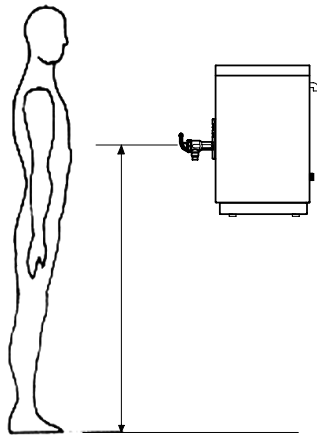

To comply with recommendations from the health and safety executive it is important that due consideration be given to safe operation of the controls of the boiler. The boiler should therefore be mounted in such a manner that the operator can stand directly facing the machine with the controls at a recommended height from the floor to the draw-off tap handle of 1200mm +/- 100mm. Consideration should also be given to the servicing requirements of the machine. The maximum and

minimum ambient operating conditions must be between 5 °C and 35 °C. The appliance is not suitable for installation where a water jet could be used. Install the boiler in a position having adequate ventilation, on a level and firm surface suitable for near boiling temperatures and the working weight of the boiler. Allow clearance for the easy removal of the outer casing lid and rear panel. A suitably qualified engineer must install this unit. Plumbing and electrical installation work is involved.


COLD WATER INLET

To comply with the U.K. Water Supply Regulation a single check-valve must be fitted to the supply. BEFORE CONNECTING, THE SUPPLY PIPE MUST BE THOROUGHLY FLUSHED OUT TO ENSURE THAT FOREIGN MATTER DOES NOT BLOCK OR ENTER THE SOLENOID VALVE

The boiler must be connected to a potable water supply using the food grade hose provided, in a manner which complies with UK water regulations. The hose should be connected to a ½” (15mm) drinking water supply via an appropriate isolating valve. The supply must provide a constant pressure of between 20 KPa and 1000 KPa (0.2 to 10 Bar), via an isolating stop cock fitted near the boiler.

If the water supply contains excessive solids in suspension it is recommended that a fine mesh “in line” water filter is fitted in the pipe work after the stop cock. Failures due to scale and sediment are not covered by the warranty.

DIMENSIONS AND WEIGHTS

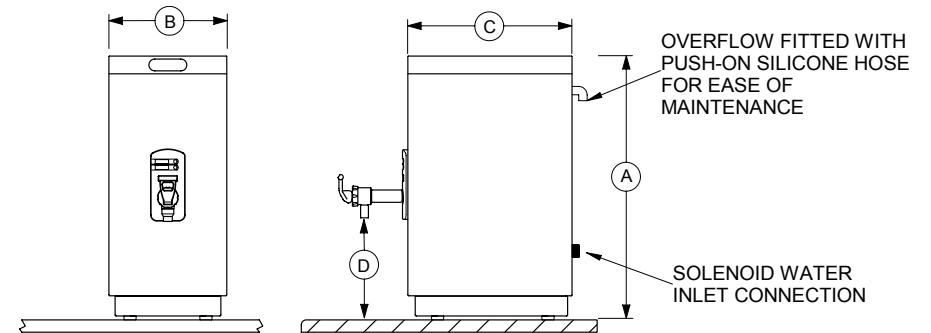

| MODEL | | A | B | C | D | DRY WEIGHT | WORKING WEIGHT |
|---------|----|-----|-----|-----|-----|------------|----------------|
| Cascade | mm | 535 | 240 | 360 | 190 | 12 KG | 29 KG |

VENT & OVERFLOW

The vent / overflow pipe must be extended and laid with a ***continuous fall***, discharging to a safe and visible point. The pipe should not be directly connected to a closed waste, as taste problems may occur and should never be allowed to become blocked or restricted. One way this could be connected is via a tundish arrangement. 15mm copper or 'Speedfit' pipe should be used.

Note

Although the machine will operate without this pipe being extended, failure to do so will mean the surroundings are susceptible to damage from any discharge

ELECTRICAL CONNECTIONS

The boiler is supplied with a fitted plug and lead and should be plugged into a 240v 13A electrical socket, capable of carrying a load of 3kW. The installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable.

USER INSTRUCTIONS



During normal operation some external parts will become very hot, particularly the tap body. Care must be taken to avoid injury, a burn or scald.

Commissioning

Note: pre- 01/06/02 Cascade boilers had slightly different modes of operation, please contact Calomax for details.

Turn on the water supply and then switch on the electrical supply.

The Wait/Ready light will flash yellow (indicating below temperature) and the unit will slowly fill with water (1.2 L/Min). When water passes the low level sensor (just below tap level) the element will also be energised. When the normal operating water level is reached the solenoid will be disabled and the element will continue to heat the

boiler until full operating temperature has been reached. At this point the Wait/Ready light will show solid orange indicating that the boiler is full and up to temperature.

Subsequent Use

After the boiler has finished the commissioning cycle, and water is drawn from the tap, water will be replaced in short cycles (Small amount of water and then heat). The solenoid and element will never be on at the same time unless the boiler is switched off and on again (Re-setting commission mode). In normal use the boiler will always be at operating temperature indicated by the Wait/Ready light showing a solid (not flashing) colour. When the boiler is full and ready the light will be orange and when the boiler is only part full the light will be yellow.

Note:

When the green service indicator light on the front of the boiler is showing solid colour, the machine has been starved of water for in excess of 20 minutes and the solenoid valve has been disabled to prevent damage to the solenoid coil through overheat. To re-energise the solenoid, the unit must be disconnected from the electrical supply and then switched back on, after first reinstating the water supply.

SCALE

The production of scale is a natural phenomenon and commonly occurs in hot water systems. The nature of the scale produced and its rate of formation varies widely throughout the country.

To ensure continuous, reliable operation, the boiler should be regularly de-scaled by a suitably qualified engineer. Suitable chemical de-scalants must only be used if the manufacturers recommendations are strictly adhered to. This is to prevent health and safety issues, taste problems and potential damage to the appliance. Misuse of such chemicals is not covered by the product warranty.

The Cascade boiler benefits from an integral scale inhibitor, **this is not** a scale eliminator and its effects will differ according to the water quality in your area. To ensure trouble free operation, periodically check for scale inside the boiling chamber. The production of scale is a

natural phenomenon and some de-scaling may be required within the first 12 months. This is not covered under the products warranty as it is not a fault.

GENERAL OPERATION

- Hold a cup below the tap or place large vessels on the drip tray. Care must be taken to avoid injury through splashing or over-filling.
- To begin filling, pull the handle forward or push it backward – hot water begins to flow. If the tap is opened fully it can be locked open (for filling large vessels) in this state the boiler must never be left unattended.
- To stop filling, release the handle so it returns to the closed position. NEVER PASS YOUR HAND BENEATH THE NOZZLE.

GENERAL NOTES

- Please retain these instructions for future reference
- Ensure that a suitable drip tray is positioned below the tap nozzle. This will help keep the surrounding work surfaces and floor free from drips or splashes. Various options are available and are outlined on the Accessories page of this booklet (page 9).
- All de-scaling and servicing must be performed by a suitably qualified engineer.

CLEANING



Avoid using any abrasive materials. Wiping the outer casing with a damp cloth should be sufficient. Some stainless steel cleaning products may not be suitable for plastic and must not come in contact with the plastic fascia. Always disconnect the electrical supply before cleaning.

NEVER USE A SPRAY JET OR ANY OTHER METHOD WHICH COULD CAUSE WATER TO ENTER THE ELECTRICAL CHAMBER.

SPARE PARTS


(Refer to centre pages for location).



Exploded parts view

(To be read in conjunction with the spare parts list)

If parts required are not identified, please contact Calomax Limited

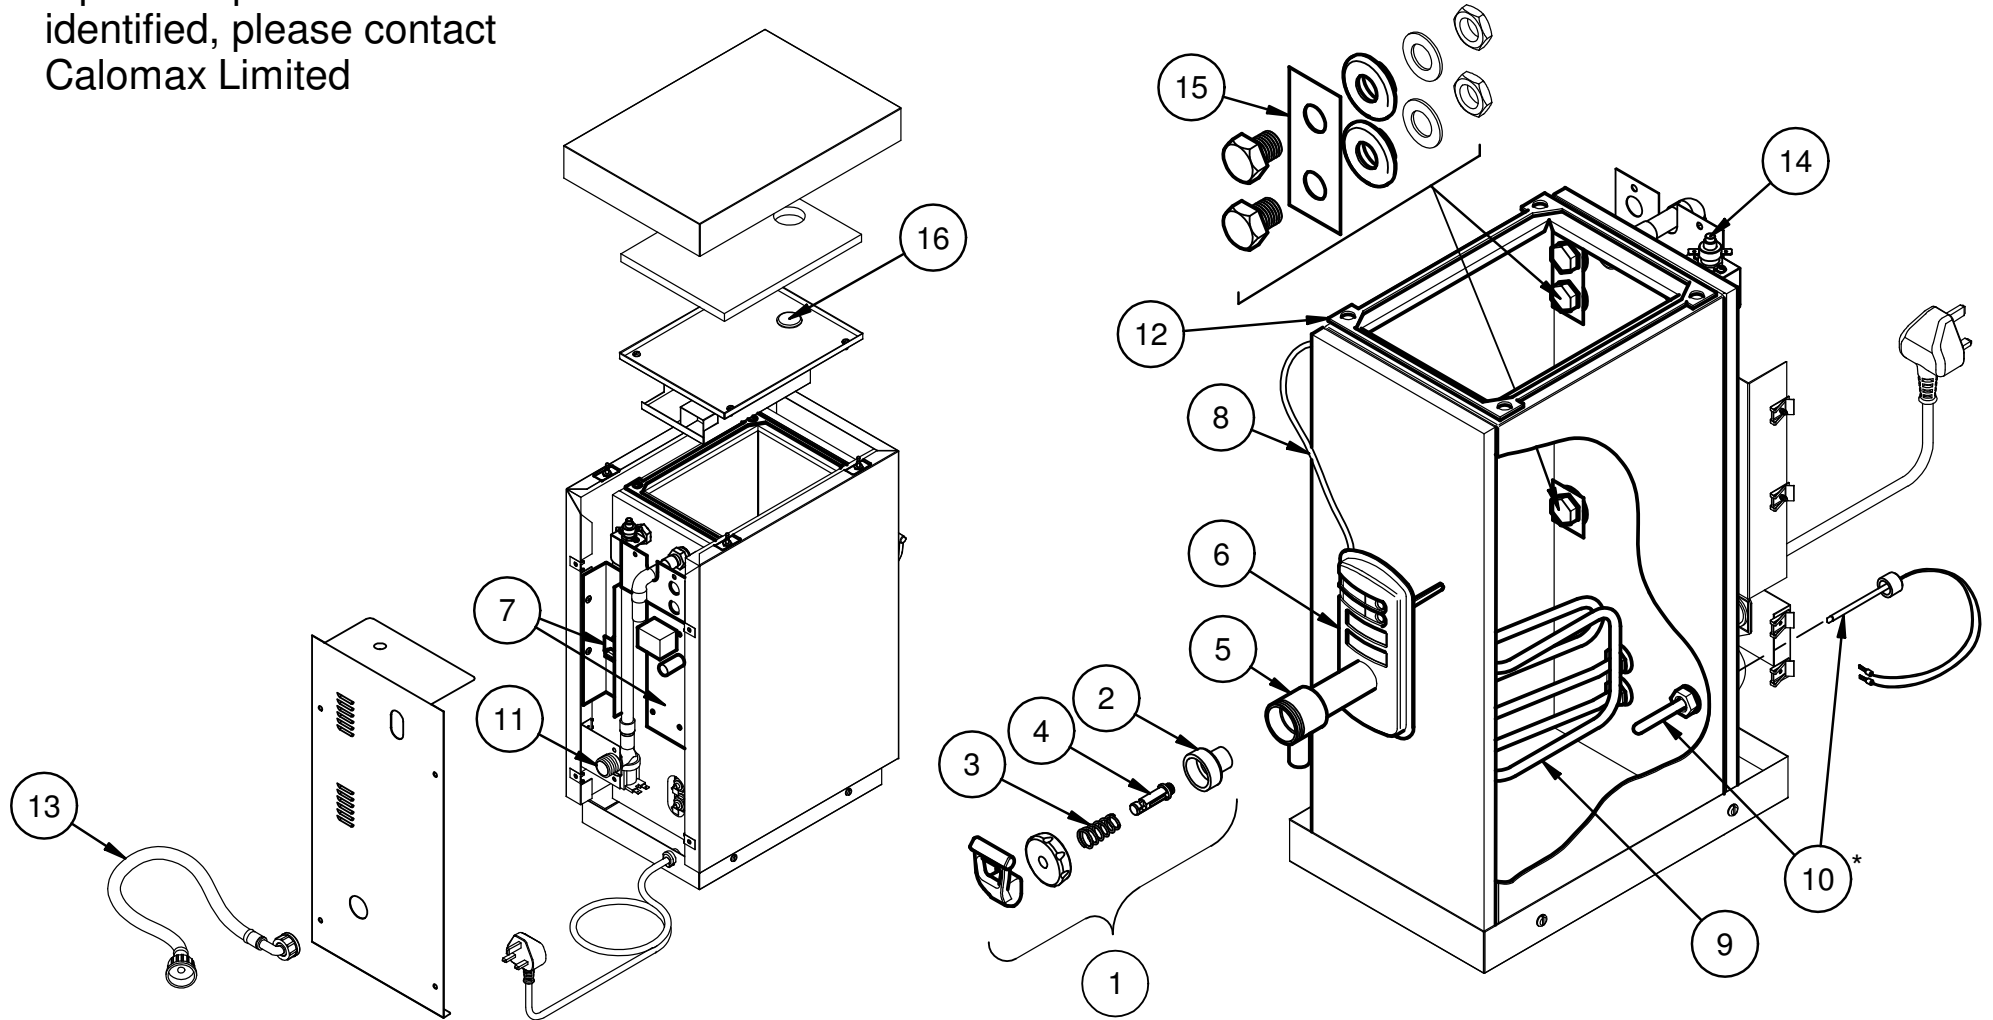

(Wrapper not shown for clarity)

* Includes nuts, washers, etc.

SERVICE INSTRUCTIONS

When the green service indicator light on the front of the boiler is showing solid colour, the machine has been starved of water for in excess of 20 minutes and the solenoid valve has been disabled to prevent damage to the solenoid coil through overheat. To re-energise the solenoid, the unit must be disconnected from the electrical supply and then switched back on, after first reinstating the water supply.

If the unit requires servicing the service indicator will flash a sequence of light pulses. A 2x or 3x-light pulse generally indicates that the low or normal level probes require de-scaling.

A 4x-light pulse means the water level has reached the high level sensor and the likelihood is that the normal level sensor requires de-scaling, or the machine has over-filled due to debris trapped in the solenoid valve. The debris can be removed by drawing plenty of water from the dispense tap, causing the solenoid valve to operate and flush out the obstruction. The machine will reset itself once the problem has cleared. If this does not rectify the problem, turn off the water supply and remove the flexible hose to check for debris in the valve's filter. The unit can be used normally while the service indicator is flashing a 4x pulse. For further assistance, contact our service department on 0113 249 6681 e-mail service@calomax.co.uk or find a local service engineer at www.calomax.co.uk

Once the outer casing is removed, access to the Service Area has been gained. This access must be restricted to persons having knowledge and practical experience of the appliance, in particular as far as safety and hygiene are concerned.

De-scale

To gain access to internal components, the body lid must be removed. The lid incorporates a condenser mechanism **which must**

be fitted the correct way round. The lid is labelled accordingly. To remove the lid, break the lid gasket seal and pull the lid forward and up, to the front of the machine before lifting it clear of the body.

Note: Whenever the body lid has been removed from the boiler a new lid gasket may be required to ensure a steam-tight joint. Damage to the unit caused by a poor lid seal is not covered by warranty.

Scale deposits should be removed from all internal surfaces, particularly the heating element, thermistor and level sensors by gently tapping or scraping. If the deposits are soft, use a nylon pad and flush out. Abrasive cleaning materials containing scouring powders and detergents must not be used, such materials can cause taste problems.

Suitable chemical de-scalants must only be used in accordance with the manufacturers recommendations. This will prevent health and safety issues, taste problems and potential damage to the appliance. All trace of these chemicals must be removed from the appliance before re-commissioning the unit. Misuse of such chemicals is not covered by the product warranty.

IMPORTANT Before re-commissioning the boiler it is important that all scale and moisture is removed from the level sensor insulating gaskets, to avoid a false signal being transmitted through the scale to the boiler body. Failure to remove this scale and/or moisture could cause the sensor to indicate to the PCB that water is covering the element, whether or not water is present. In this situation the PCB could energise the element causing failure. If in doubt, protect the element by hand filling with water to the level of the draw-off tap before switching on the electrical supply to the boiler.

General function

The printed circuit board (PCB) controls the heating and filling functions of the boiler by monitoring the thermistor and level sensors. The PCB also controls the external light unit to indicate the current state of the boiler. Red and yellow LED'S on the circuit board indicate whether the PCB has energised the element or solenoid respectively.

Should an element fail and need to be replaced, it may be necessary to replace the lid gasket to ensure a reliable steam-seal.
Note: the element has a permanent 'Live' feed, and the 'Neutral' is switched.

Printed Circuit Board replacement (PCB)


In the event of a PCB failing and a replacement being required, full instructions will be supplied. It is important to note however, that the Triac PCB must be securely mounted against the copper heat-sink to ensure reliable heat dissipation. Heat transfer compound is also supplied with all replacement circuit boards.

Adjusting the Water Temperature Set Point


The temperature potentiometer (Pot) is pre-set at Calomax and will only require adjustment in exceptional circumstances. Contact Calomax for advice.

Water boils at different temperatures depending on barometric pressure. The temperature should not be tuned higher than 98°C, or over boiling may occur during low barometric pressure conditions, causing the unit to trip the overheat cut-out device.


Accessories

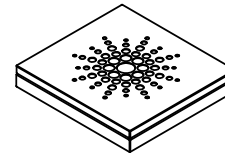


Worktop-mounting Stainless Steel drip tray
Ref. HSSDTK (freestanding)
HSSDTWDK (with drain outlet)

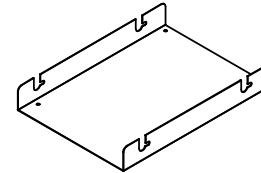


Boiler securing clamp
(To fix boiler to a worktop)
Ref. CNC

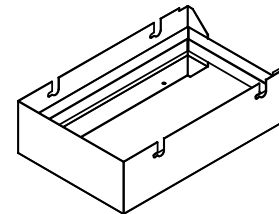


Boiler Stand
(To increase height of boiler)
Ref. CASS##
(Where ## denotes **additional** clearance between worktop and tap nozzle)

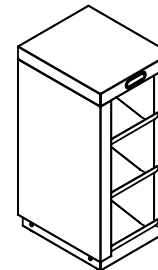


Ingredient caddy
Ref. IC3 (3 bay) - *as shown*
IC4 (4 bay)

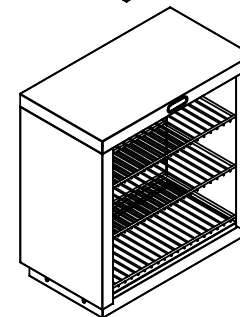


Shelf unit
Ref. SHU

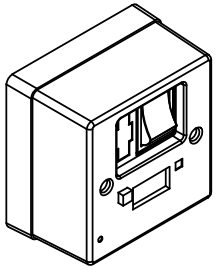


Fused spur time switch
Ref. 7DFST
Max 3 kW

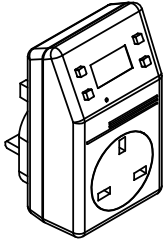


Plug-in time switch
Ref. 7DPIT
Max 3 kW

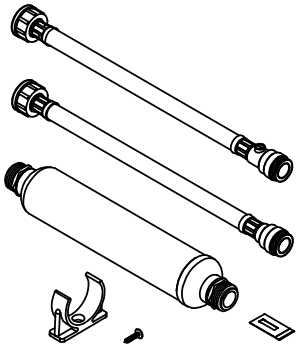

Water filter kit
(To reduce taste & odour problems)
Ref. 10TOSCK

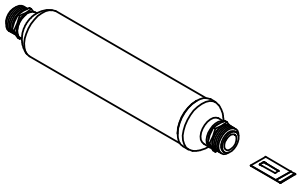

Ref. 10TOSC
(Filter & timestrip replacement for kit shown above)

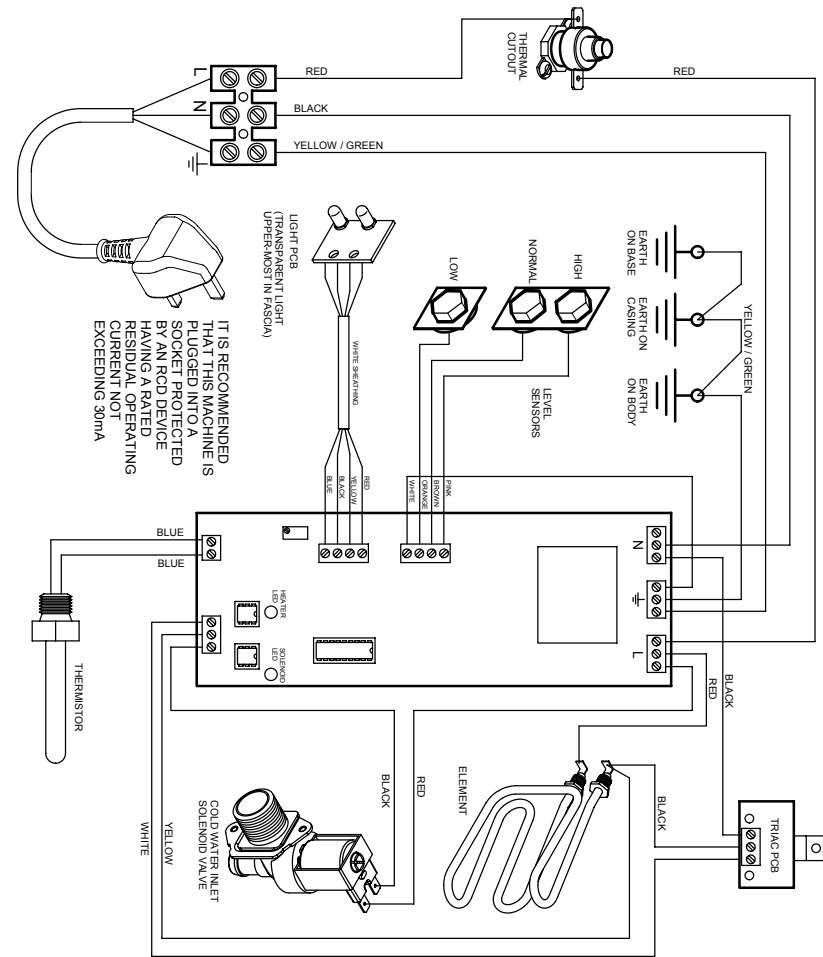

BASIC TROUBLE SHOOTING

| Symptoms | Possible Cause | Remedy |
|---------------------------------|--|--|
| No boiling water available | Broken tap top | Replace tap top (or component) |
| | Normal level sensor holding signal | De-scale / Clean / Dry |
| | Thermal cut-out tripped (no lights lit on fascia) | Reset and check for faults (i.e. scale on thermistor) |
| | Element failed | Replace element |
| Thermal cut-out trips regularly | Excessive internal scale. (See 'De-Scale' page 12) | De-scale the boiler (Particularly thermistor) |
| | Faulty wiring to thermistors / faulty thermistors | Repair / replace as required |
| | Temperature controller needs adjusting | Lower operating temperature |
| | Element failed to earth | Replace element |
| | Defective Printed Circuit Board & / or Triac PCB | Replace Circuit Board & Triac (Sold as a matched pair) |
| Overflows | Dirt in solenoid valve. | Clean solenoid filter and "work the boiler" or replace the solenoid -see Service Instructions (page 12). |
| | Level sensors require de-scaling or replacing | De-scale / replace sensors |
| | Printed circuit board faulty | Replace P.C.B |

WARRANTY GUARANTEE (UK Mainland customers only)

Calomax have manufactured water boilers in the UK for over 50 years. We are proud of our products and the back-up service we provide

Properly maintained and serviced, a Calomax boiler should last many years and we have no hesitation in providing a full 12 months parts and labour warranty for all models. Please complete and return the enclosed product registration form as soon as possible to activate this, **or register online at www.calomax.co.uk** .

In addition, the Clipper, Kudos and Quantum models carry an additional 12 month back to base warranty.

Some factors are beyond our control and would invalidate the warranty offered. These include:

- Incorrect installation
- High / Low water pressure
- Incorrect voltage supply
- Accidental damage
- Limescale build-up

The last item can be a particular problem for water dispensing equipment in hard-water areas. All hot water equipment should be serviced and de-scaled by approved organisations on a regular basis to avoid a damaging build-up of limescale.

Although our boilers incorporate scale-inhibitor technology, we recommend that a taste, odour and scale filter should be fitted where appropriate.

Please visit our website www.calomax.co.uk for details of our Service Partner Network and the range of filters and accessories available

PLEASE ENTER SERIAL NUMBER FOR FUTURE REFERENCE

| | |
|---|---------------------------|
| Model | CASCADE |
| Serial Number | |
| Draw off Capacity | 9 Litres |
| Heat-up Time (Full capacity - first switch on) | 45 Minutes |
| Average Flow rate from tap (Standard nozzle) | 2.5 Litres / Minute |
| Voltage | 220 - 240 V ac 50 - 60 Hz |
| Power rating | 3kW (MAX) |

Note: All measurements are approximate.

PLEASE CONTACT OUR SERVICE DEPARTMENT FOR ASSISTANCE

Calomax Limited, Lupton Avenue, Leeds LS9 7DD
Tel: 0113 249 6681
Fax: 0113 235 0358
e-mail: service@calomax.co.uk